6th generation (2015+) Mustang Inner Lap Belt Mount kit.

1. Remove front seats.

First remove the plastic bolt covers front and rear using a small flat head screw driver. Slide the seat all the way forward and remove the rear torx bolts. Slide the seat all the backwards and remove the front torx bolts. Move seat to center position on slider. Lower seat to it's lowest position. Repeat on other seat. Disconnect battery ground cable under hood. Tilt seat backwards, disconnect seat harness, remove seat from car. Repeat on other seat.

Note: Do not disconnect harness plugs until battery ground cable is disconnected from car.





2) Add clip in harness mount to stock seat

The clip in harness mounts between the factory seat belt receptacle and the seat. The factory torx bolt is reused. Remove torx bolt, remove the retaining clip securing the bolt to the buckle with needle nose pliers, insert supplied clip in harness adaptor, reinstall on seat. The location tab on the factory mount location should pass through the hole on the clip in mount, into the locating hole on the factory seat.





3) Reinstall front seat, including seat wiring harness, reconnect battery.

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.