

**R-2020**

## **BOXSTER FIRE EXTINGUISHER BRACKET** **INSTALLATION INSTRUCTIONS**

This fire extinguisher bracket is designed to mount a 2.5 lb fire extinguisher to the driver or passenger Porsche factory seat.


Our mounting bracket adapts the bracket supplied with the extinguisher to the seat. The hole pattern on our bracket matches the hole pattern on the bracket supplied with *AMEREX* extinguishers. If your bracket does not match our hole pattern drill (4) 1/4" diameter holes in your bracket using the supplied template.

Step 1.

Remove the seat from the vehicle and place it on its back with the bottom of the seat visible as shown.

Step 2.

Remove the pin shown at point -A. This pin anchors the cylinder that raises the seat on the driver's side -C. The passenger side seat may not have this cylinder but it will have a support bracket instead.

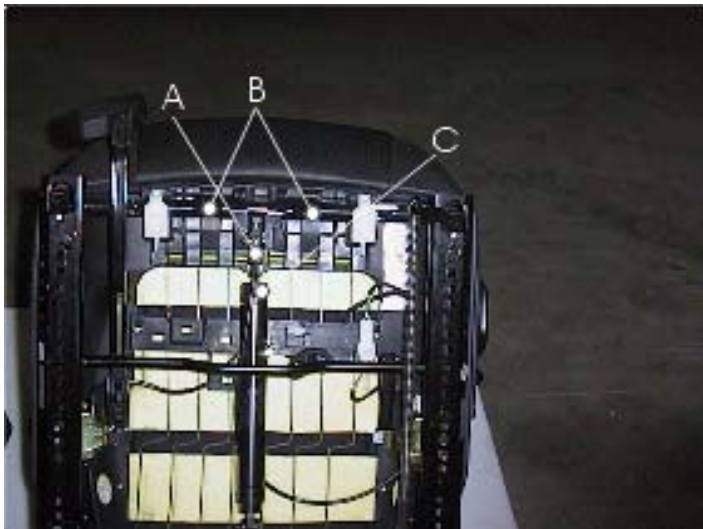

Step 3.

Position the extinguisher mount as shown and install supplied pin through the holes in the extinguisher mount and through the original pin location.



Step. 4 Install (2) screws and nuts through the existing holes on the seat bracket B as shown in figure 1 and fire Extinguisher mount.



Step 5.

Reinstall the seat in the vehicle.

Step 6.

Attach the mounting bracket supplied with the fire extinguisher to the Brey-Krause mount using the (4) #10-24 screws supplied.

Step 7.

Install the fire extinguisher.

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.

