

FIRE EXTINGUISHER BRACKET FOR C4 CORVETTE INSTALLATION INSTRUCTIONS

This fire extinguisher mounting bracket is designed to mount a 2.5 lb fire extinguisher to the driver or passenger seat of a model C4 Corvette factory seat.

Our mounting bracket adapts the bracket supplied with the extinguisher to the seat. The hole pattern on our bracket matches the hole pattern on the bracket supplied with 2.5lb. *AMEREX* extinguishers. If your bracket does not match our hole pattern drill (4) 1/4" diameter holes in your bracket using the supplied template.

Step 1.

Remove seat bottom cushion from seat. This is done by releasing the small wire clip located under the front middle portion of the seat bottom.


Step 2.

Remove two front seat bottom to seat track-mounting bolts. Loosen two-rear seat bottom to seat track-mounting bolts.



Step 3.

Slide Brey-Krause extinguisher mount between seat track and seat bottom until holes in the mount line up with holes in the seat bottom and seat track.

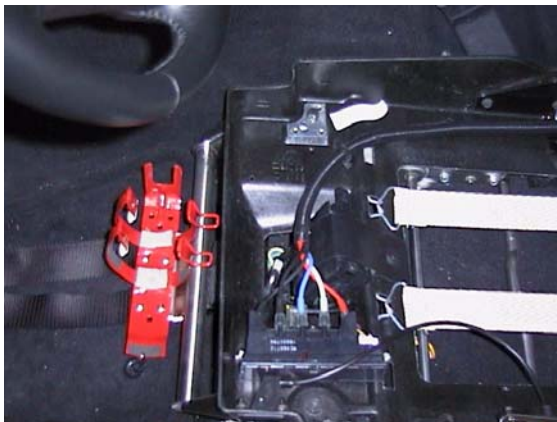

Step 4. Reinstall two front seat bottom to seat track-mounting bolts and tighten the rear seat bottom to seat track bolts.

Step 5. Reinstall seat bottom cushion.

R-2110

FIRE EXTINGUISHER BRACKET FOR C4 CORVETTE
INSTALLATION INSTRUCTIONS - continued

Step 6.

Attach the mounting bracket supplied with the fire extinguisher to the Brey-Krause mount using the supplied hardware. Finished installation should be as shown.



Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.