

FIRE EXTINGUISHER BRACKET
INSTALLATION INSTRUCTIONS
Passenger Side +08 Mini Cooper
Manual Bar Release Sliders

This fire extinguisher bracket is designed to mount a 2.5 lb fire extinguisher to the passenger non-powered, Mini Cooper factory seat with the bar release sliders.

Our mounting bracket adapts the bracket supplied with the extinguisher to the seat. The hole pattern on our bracket matches the hole pattern on the bracket supplied with *AMEREX* extinguishers. If your bracket does not match our hole pattern drill (4) 1/4" diameter holes in your bracket using the supplied template.

Step 1.


Remove the seat from the vehicle. This is done by removing the four floor mounting bolts

Step 2.

Lay the seat on its back, with the bottom of the seat facing you. Remove the front nuts that secure the seat to the sliders, one on the outboard side and two on the inboard side. Loosen the rear nuts.

Step 3.

Install the fire extinguisher bracket between the seat and slider assembly. Tighten nuts securing the seat to the sliders.

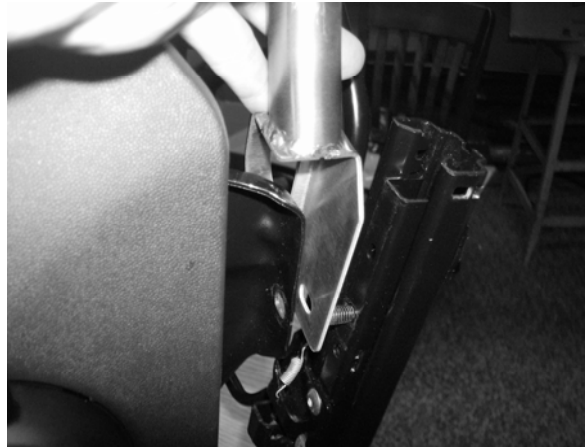

Step 4. Reinstall the seat in the vehicle.

Step 5. Attach the mounting bracket supplied with the fire extinguisher to the Brey-Krause mount using the (4) #10-24 screws supplied.

Step 6. Install the fire extinguisher.



Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.