

R-9041 INSTALLATION INSTRUCTIONS

SEAT TRACK ADAPTERS (ADAPTS SPARCO AND COBRA SLIDERS TO All 1999 AND LATER PORSCHE CHASSIS)


These adapters are designed to adapt Sparco or Cobra seat sliders to 1999 and later Porsche chassis. Sparco/Cobra sliders not included. *Modification to the Sparco slider is required. See below.

The actuating tube supplied with the Sparco sliders positions the sliders 13" apart. The sliders are mounted on 16" centers. Order Brey-Krause part# R-9045 actuating tube to replace the Sparco actuating tube. Side mount brackets for Sparco & Recaro seats also available from Brey-Krause.

Step 1.

Cut 3/4" from the rear most lower portion of the sliders. This is the portion of the slider that bolts to the floor. This is necessary to expose the rearmost mounting hole of the R-9041 seat track adapter. Do not cut the upper portion of the slider!

See below:

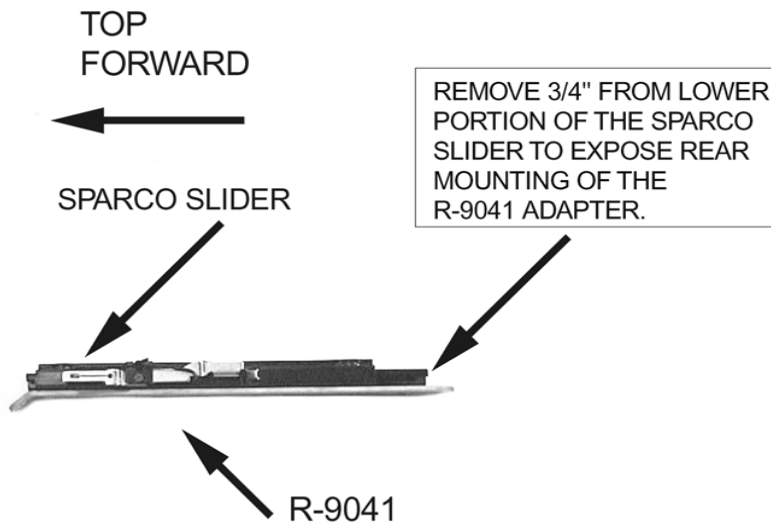

Step 2.

Mount seat track adapters to the sliders using the supplied hardware.

Step 3.

Remove factory seat from vehicle.

Step 4.

Attach adapter/slider assembly to chassis using existing hardware.

Step 5.

Attach R-9045 actuating tube to sliders.

Step 6.

Attach racing seat to sliders per manufacturers specifications.

Performance driving events are by nature potentially hazardous to your health. Brey~Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.