

R-9140

C6 REAR TOW HOOK

Fits >05-present C6 coupes & '06-present Z06 coupes


The Brey-Krause R-9140 C6 rear tow hook provides a secure location for a safety crew member to attach a tow rope.

Step 1

Raise vehicle and support with jack stands. Never work on a vehicle supported only with a jack.

Step 2

Using a 13mm wrench remove exhaust mount bolts shown in Figure 1.

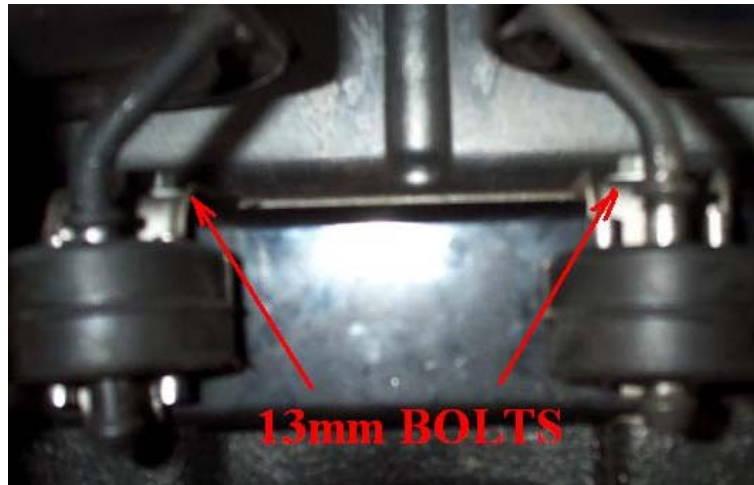

Step 3

Place tow hook in position. It may be necessary to rotate exhaust mount brackets temporarily out of the way, and gently push the one muffler to the side. Place tow hook between frame and exhaust bracket. Replace stock bolts with supplied bolts and washers and tighten.

The finished installation should look similar to below.



Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.