

**R-2160**

**MUSTANG FIRE EXTINGUISHER BRACKET**  
**INSTALLTION INSTRUCTIONS**

This fire extinguisher bracket is designed to mount a 2.5 lb fire extinguisher to the driver or passenger Mustang 6th generation factory seat.

Our mounting bracket adapts the bracket supplied with the extinguisher to the seat. The hole pattern on our bracket matches the hole pattern on the bracket supplied with AMEREX extinguishers.

Step 1. Remove front seat.


Remove the plastic bolt covers front and rear using a small flat head screw driver. Slide the seat all the way forward and remove the rear torx bolts. Slide the seat all the backwards and remove the front torx bolts. Move seat to center position on slider. Lower seat to it's lowest position. Disconnect battery ground cable under hood. Tilt seat backwards, disconnect seat harness, remove seat from car.

Note: Do not disconnect seat harness plugs until battery ground cable is disconnected from car.




Step 2.

Place seat on its back with bottom of seat visible, as shown. Insert the two push in expanding clips at points (A) and the side inserted screw clip at point (B).

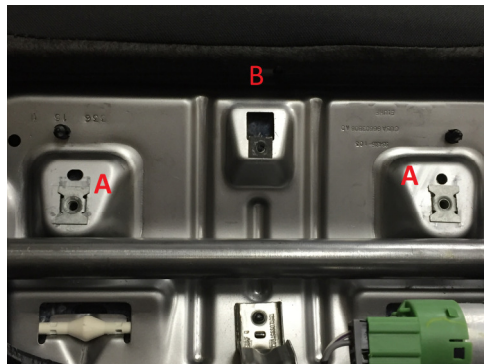

**Step 3.**

Align plate and insert two bottom (large) bolts, no more than 2 turns (more turns will lock the insert clip in place). Slide plate up until hole on tabs aligns with hole in side mount spring clip. Insert small bolt, tighten 2-3 turns.

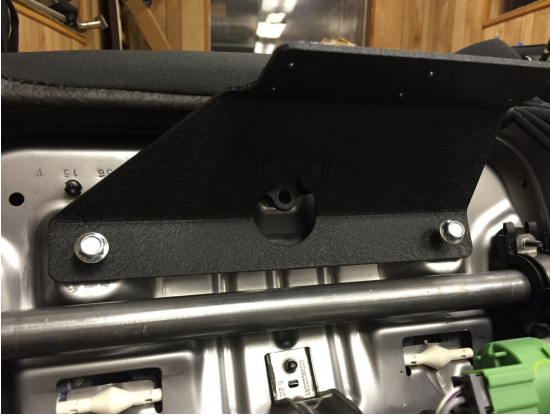

**Step 4.**

Tighten down large bolts, ~12 ft lbs. Tighten small bolt until snug, but not tight (this bolt is just for locating, not supporting-- over tightening will strip the screw clip).



**Step 5.** Set seat upright, attach fire extinguisher mount of choice. Reinstall seat in car, making sure not to reconnect battery until seat wiring harness is reconnected.

